

HDE = HARDDISK & ETHERNET PARAMETERS

To assume new values: // = press SHIFT-RESET or turn CNC off & on, / = press RESET, unmarked = do nothing

P0- HDDIR	NOT USED AT THIS TIME	
P1- CNMODE	INDICATES THE TYPE OF NETWORK BEING USED	0-workgroup, 1domain
P2-CNID	NAME ASSIGNED TO THE NODE ON THE NETWORK	up to 13 characters
P3-CNGROUP	NAME OF GROUP THE NODE BELONGS TO ON NETWORK	up to 13 characters
P4-CNDOMAIN	NAME OF DOMAIN THE NODE BELONGS TO ON NETWORK	up to 13 characters
P5 – EXTNAME1	NAME DISPLAYED FOR THE HARD DISK DIRECTORY	up to 13 characters
P6- CNHDDIR1	INDICATES WHICH HARD DISK DIRECTORY IS SHARED	up to 22 characters
P7- CNHDPAS1	PASSWORD FOR ACCESSING HARD DISK	up to 13 characters
P8 – P21	NOT BEING USED AT THIS TIME	